

How To Set The System Clock Using An LCD Plate



The clock is set automatically when a new configuration file is uploaded from a computer. It may also be set at any time using the Evolution Configuration Software. However it may also be set, without requiring a computer, using an LCD plate as follows:

1. Hold down bottom two buttons together for five seconds


2. A menu will appear; release the buttons





3. Press button three (system setup). A passcode entry screen appears, enter 2121

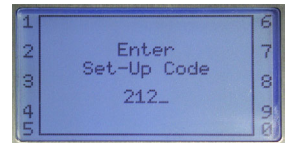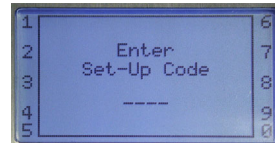

4. A new menu appears. Select programming options (button 1). A new menu appears

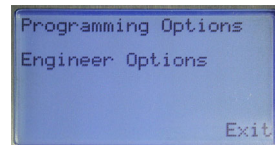


5. Select 'set the time' (button 3). The current time is shown in the centre of the screen, and may be adjusted using the controls on the screen

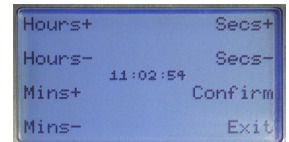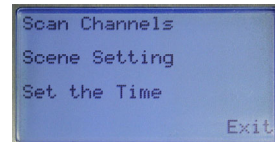

6. Select 'confirm' when the time has been adjusted correctly. NB the time displayed will not continue to update from the internal clock whilst you are doing this

7. Do the same thing for the date

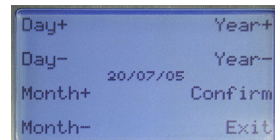

8. Press 'confirm' when date has been adjusted correctly

9. Press 'exit' (button 8) three times to leave the menus